



PS5 CONTROLLER SKINS

CAMO RED

397071

Compatible with PS5™

(ENGLISH)
USER MANUAL
MV2101

SETUP INSTRUCTION



Disassembly method:

1. Align the replacement with the controller, and then gently push into place
2. Open upwards and away from the controller, remove the replacement, be careful, otherwise the controller may be damaged.
3. Effect after disassembly



Installation method:

1. Align the replacement with the controller, and then gently push into place
2. Clamp each corner and gently push it into place, being careful, otherwise the controller may be damaged
3. Effect after installation

SPECIFICATION & APPEARANCE ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE. THIS PRODUCT IS NOT DESIGNED, MANUFACTURED, SPONSORED OR ENDORSED BY SONY COMPUTER ENTERTAINMENT INC. OR ANY OF THEIR DIVISIONS. TRADEMARKS USED ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.



Disposal of waste equipment by users in private households in the European Union. This symbol indicates that this product must not be disposed of with your other household waste.

Electrical and electronic equipment contain substances which may cause damage to human health and environment if not recycled and correctly. It is your responsibility to hand over to a designed collection point for recycling of waste electrical and electronics equipment. When handing over for correct recycling you help to prevent these products straining nature and environment unnecessarily and to protect human health. For more information regarding correct disposal, please contact your local city office, your household waste disposal service or the store where you purchased this product.

Nordic Game Supply Limited
Unit 03-04, 21/F., Eight Commercial Tower, 8 Sun Yip Street, Chai Wan, Hong Kong.

Nordic Game Supply AB
Marios Gata 21, 434 37 Kungälv Sweden