



PIRANHA - NINTENDO SWITCH CHARGING KIT

397538

Compatible with Nintendo Switch™

USER MANUAL
MV2101

EN DK NO SE FI

1. Notice

Before using this product, please read this manual and all compatible hardware manuals carefully. Please keep this manual carefully for future reference.

Safety

Please place this product out of reach of young children. Young children may swallow small parts, causing injury or product damage.

 
 
- Do not touch this product with wet hands.
- Do not disassemble or modify this product.
- When connecting this product to the Joypad or base, please make sure that the interface is free of dust or foreign matter.
- Do not allow liquid or small particles to enter this product.
- Do not expose this product to dust, smoke or steam.
- Do not expose this product to high temperature, high humidity or direct sunlight.

Use and maintenance

- The interface must not be in contact with any other metal objects.
- Do not place any heavy objects on top of this product. Do not stand on top of this product.
- Do not throw or drop this product, or apply huge external force in other ways.
- Following the instructions below will help avoid aging or fading of the product surface.
 - Wipe with a soft, dry fabric.
 - Do not place any rubber or vinyl materials on the surface of this product to extend the life of the product.
 - Do not use solvents or other chemicals. Do not wipe with chemically treated cloth.


2.Product introduction

This product can be used to charge the N-Switch Joy-Con and Switch Pro, it can be used with Switch original dock and the NS Pro charging dock, the charging dock has charging indicator and overcharge protection.

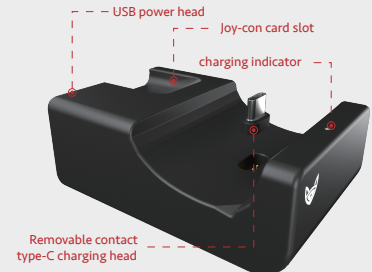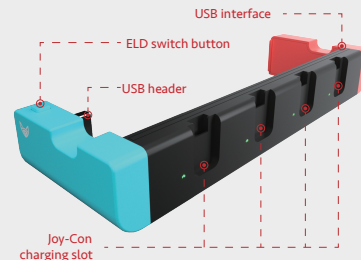


3. Joy-Con charging base use

 
1. Tear off the protective film on the inner side of the support rod on the right side of the joy-con charging base (the side with the USB port), and then rotate it 90° upwards according to the logo.

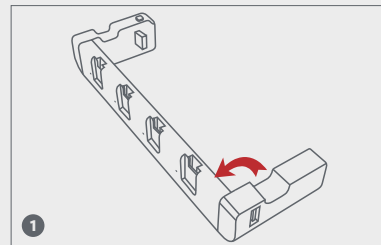

 
2. Align the original N-Switch dock with the USB head on the left side of the joy-con charging base and insert it diagonally into the joy-con charging base.

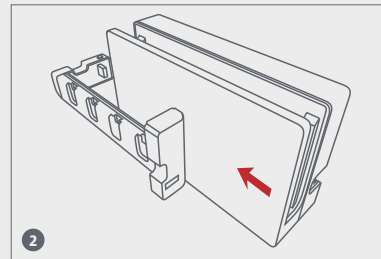

 3. After the original N-Switch dock is connected to the joy-con charging base, turn the right support rod of the joy-con charging base (the side with the USB port) downward by 90° and return to the original position.

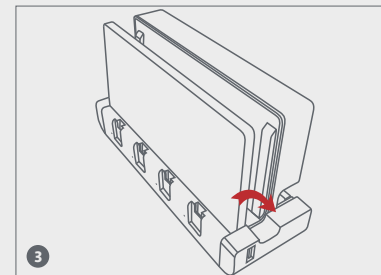


 4. After the original dock is powered on, plug the Joy-Con joypad into the interface to charge. (Can be used with the NS Pro joypad charging dock of this brand)

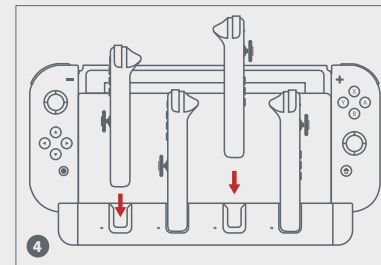

4. NS Pro charging base use

 1. Insert the USB head of the NS Pro charging base into the extended USB port of the Joy-Con charging base.

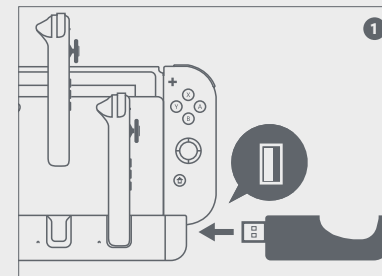

2. Insert the NS Pro charging base [removable contact type-C charging head] into the charging port of the N-Switch Pro joypad.



3. Put the N-Switch Pro joypad upside down into this NS Pro charging base and it can be used normally.



5. Indicator status

The indicator light of this product is a charging status indicator, which has two states.

Charging: red light
Fully charged: green light

6. NS Pro charging base Specification

Product name : NS Pro joypad charging dock
Part number : LF-N001a
USB Input : 5V=1A
USB Output : 5V=1A
Product size : 92*53*29mm (Length * Width * Height)
Product weight : 41g

7. Joy-Con charging base Specification

Product name : N-Switch Joy-Con charging dock
Part number : LF-N001b
Input voltage : DC 4.8-5.5V
Input current : 1.0A
Working current : 840±20mA
Charging voltage : 4.5V-5.25V
Product size : 200 * 67 * 30mm
Product weight : 63g



Nordic Game Supply Limited
Unit 03-04, 21/F., Eight Commercial Tower, 8 Sun Yip Street,
Chai Wan, Hong Kong.

Nordic Game Supply A/S
Sletvej 38-40, DK-8310 Tranbjerg J, Denmark